

## AIR LIQUID VALVES FOR TRACTOR AND ROAD GRADER SERVICE

HALTEC NO.	TR NO.	A	B	BEND ANGLE	VALVE HOLE
TV-618A	TR-618A	1 7/8"	-	-	0.625
TV-618B	TR-618B	1 1/2"	-	-	0.625
TV-618RB	-	1 1/2"	-	-	0.625
TV-621A	TR-621A	1 1/2"	3	65°	0.625
TV-622A	TR-622A	1 3/4"	4 1/2	90°	0.625
TV-623A	TR-623A	1 1/2"	2 1/4	65°	0.625
N-1000	TR-619A	1 7/8"	-	-	0.812
H-50	TR-F910B	1 13/16"	-	-	0.812



TV-621A

TV-618A

### TRACTOR AND GRADER TUBE



TV-218R

HALTEC NO.	TR NO.	BASE DIAMETER	CORE HOUSING	VERTICAL HEIGHT	VALVE HOLE
TV-218R	TR-218A	2 1/2"	TV-CH-3	1 7/8"	0.625
TV-220R	TR-220A	2 1/2"	TV-CH-3	2 15/16"	0.625
TV-916R	TR-916A	3 1/4"	R-372	1 7/8"	0.812

Valve assemblies with removable core housing for liquid fill. Has Vulc-on back to allow field repair.

### RIM HOLE PLUGS



P-15

#### P-15 FOR TUBE-TYPE WHEELS


Used to plug 5/8" rim hole and avoid tube "pouching."



T-30

#### T-30


Used to seal 13/16" rim hole when relocating valve.

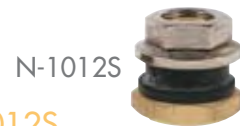

N-1012S

#### N-1012S

 Used to seal 5/8" rim hole when relocating valve.



ALSP

#### ALSP

Air-liquid spud plug. Used to replace CH-3 core housing.

### CORE HOUSING



TV-CH-1

TV-CH-1

Fits old-style TR-218 and TR-220 valves.



TV-CH-3

TV-CH-3

Fits all fast flow air-liquid valves except Super Large Bore.



R-372/TR-CH-16

R-372/TR-CH-16

Fits SP816 tube spud and T-81 & C-100 spud.

### AIR/LIQUID EXTENSION

#### TV-5905 AIR/LIQUID EXTENSION

Used with tractor or grader valve stems. 90 degree angle for more accessible valve.



TV-5905

### RIM NUTS & BUSHINGS

#### B9A BUSHING ASSEMBLY

Fits over TR-218A and TR-220A valves to allow use of valve in the 13/16" valve hole. Consists of B9-1 bushing and B9-2 nut.



LN-10

#### LN-10 PLASTIC RIM NUT

Rim nut for tractor tube valves TR-218A and TR-220A. For brass rim nut, order LN-10B. See page 44 for TL-LN-10 installation tool.



B-6

#### B-6 BUSHING

Fits over TR-13 tube valve when used in 5/8" valve hole.

## AIR/LIQUID VALVES