

LARGE BORE TOOLS



N-1610 LARGE BORE CORE TOOL



N-1710 LARGE BORE CORE TOOL

Special valve core screwdriver tool. Sliding sleeve allows positive grip on valve core for those hard-to-reach valves.



N-1810 LARGE BORE HEX CAP REMOVER

With plastic handle for positive grip - OAL 10".



N-1910 LARGE BORE CORE REMOVER

Has plastic handle for positive grip - OAL 6".



TL-631 SUPER LARGE BORE RETHREADING TOOL

Used to rethread 1 1/16" - 24 thread on any Super Larger Bore valve.



TL-LN-10

The TL-LN-10 is a nut driver that installs the LN-10 nut onto the TV-218A/TV-220A tractor tire valve.



8909-C

Guides, aligns, and holds Large bore valve through rim hole while mounting the tire.

LARGE BORE AIR CHUCKS

322 LARGE BORE DUAL FOOT AIR CHUCK

45° angle chuck allows easy access to the tire valve. Has 1/4" NPT female thread.

326 SCREW-ON AIR CHUCK

Has .485-26 internal thread and 1/2" NPT external thread. Full flow for seating of tire beads.

377 LOCK-ON AIR CHUCK (LONG)

Chuck locks on valve when cocked on threads. Has greater air flow and seat cannot be blown out if seal fails. Has 1/4" NPT female thread. Replacement washer 313.



328 LOCK-ON AIR CHUCK (SHORT)

Chuck locks on valve when cocked on threads. Has greater air flow and seat cannot be blown out if seal fails. Has 1/4" NPT female thread.



H-4660A CLIP-ON AIR CHUCK

Securely locks onto valve when sleeve is pushed forward, releases when sleeve is pulled back. Has 1/4" NPT female thread.



10013 LARGE BORE SCREW-ON CHUCK

Fits 3/8" ID air hose. Screws on to Large Bore valves. Open and close the valve core by turning the knob on top of the chuck.



SAFETY!

THESE PRODUCTS, AS WELL AS ALL TIRE TOOLS, SHOULD NEVER BE USED BY PERSONS UNLESS THEY HAVE BEEN TRAINED PROPERLY ACCORDING TO O.S.H.A. REGULATION #29CFR 1910.177 ENTITLED "SERVICING SINGLE-PIECE & MULTI-PIECE RIM WHEELS."

LARGE BORE GAUGES, TOOLS, CHUCKS